


# Wooden 4 Posted Queen Bed

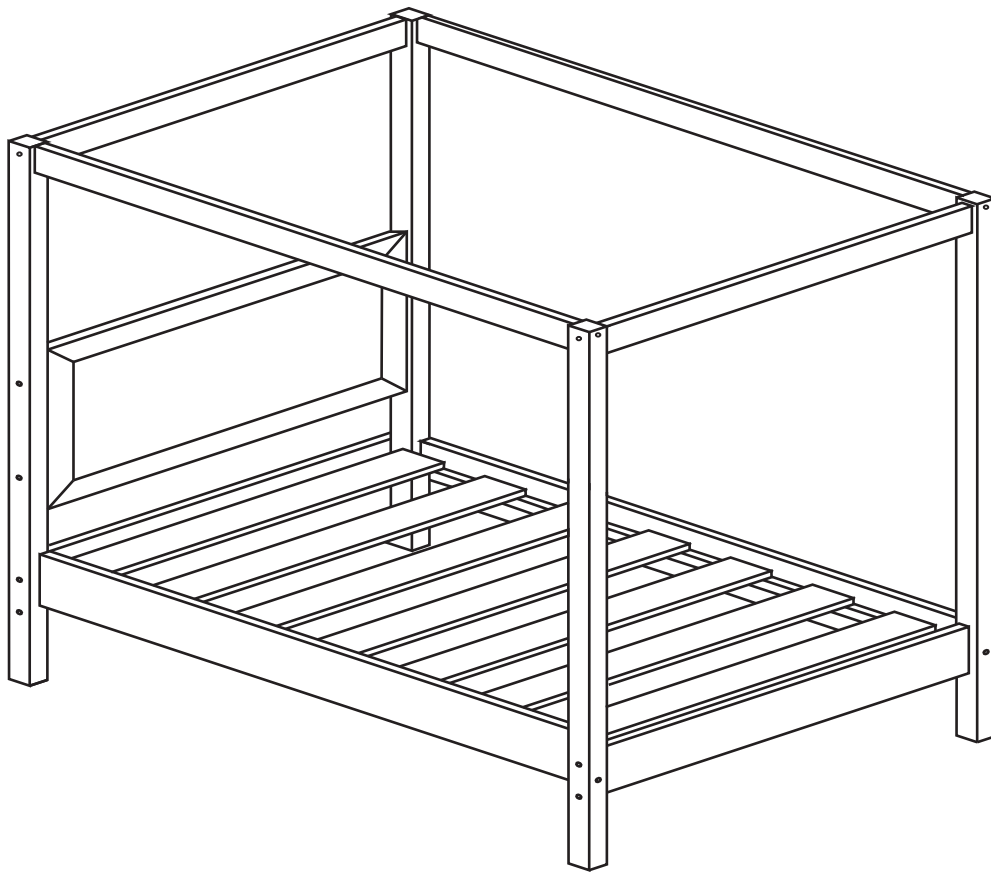


## Assembly Instructions

\*More than a single person to assemble\*



## TABLE OF CONTENTS


---

-  X 24 (115MM FURNITURE SCREW)
-  X 2 (80MM FURNITURE SCREW)
-  X 26 (CROSS DOWEL)
-  X 20 (10X40MM DOWEL)
-  X 12 (8X40MM DOWEL)
-  X 20 (8X40MM SCREW)
-  X 1 (4/5MM ALLEN KEY)



## Step 1


### Headboard assembly

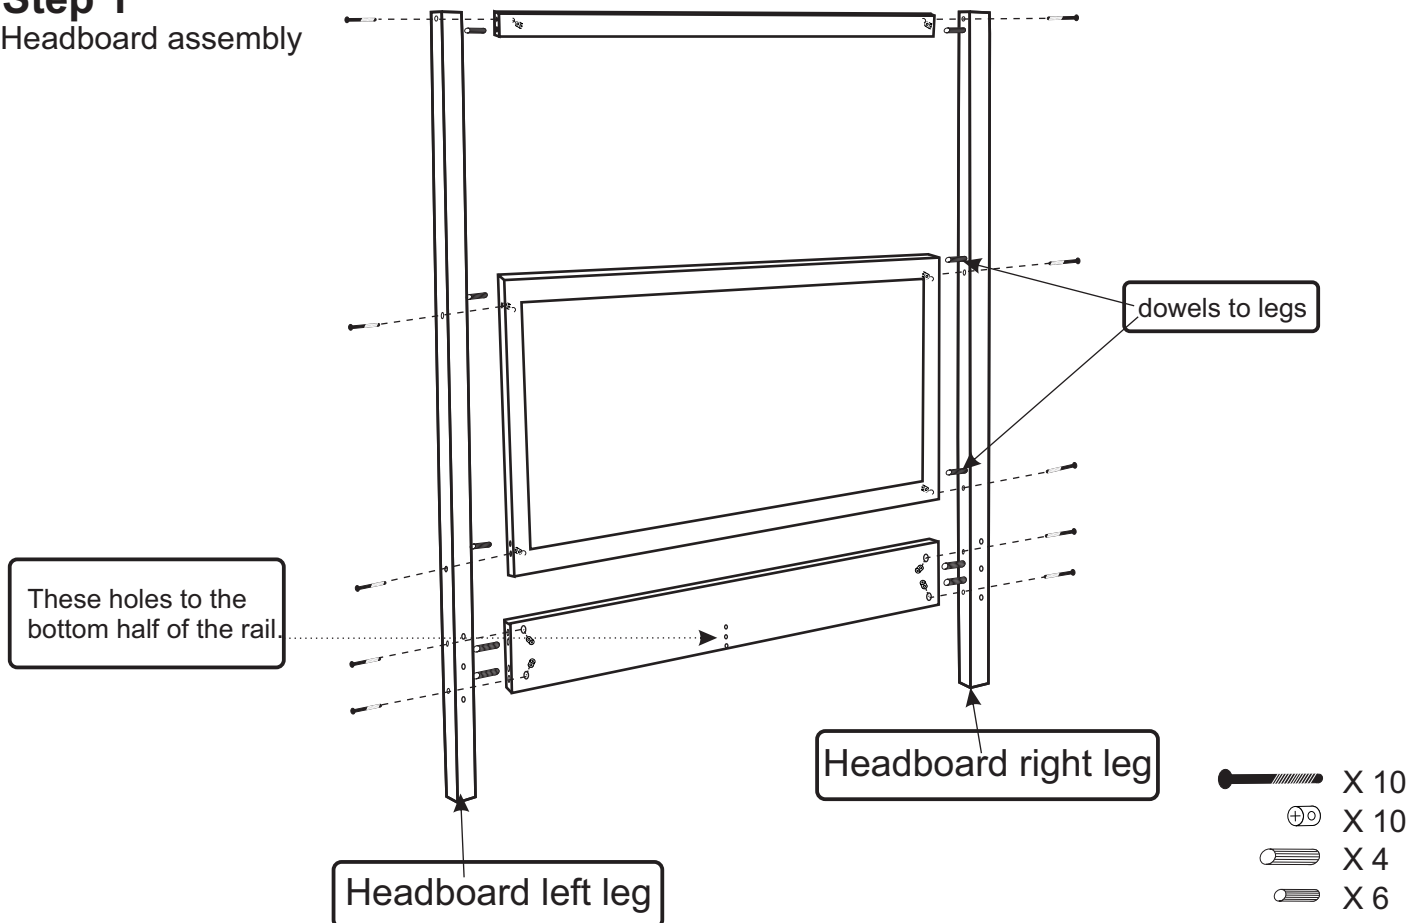

Please note# Only the head panel and the top rails take the 8x40 mm dowels  
The bottom part of the bed takes the 10x50mm dowels to support the weight.


## Step 2

### Foot end assembly

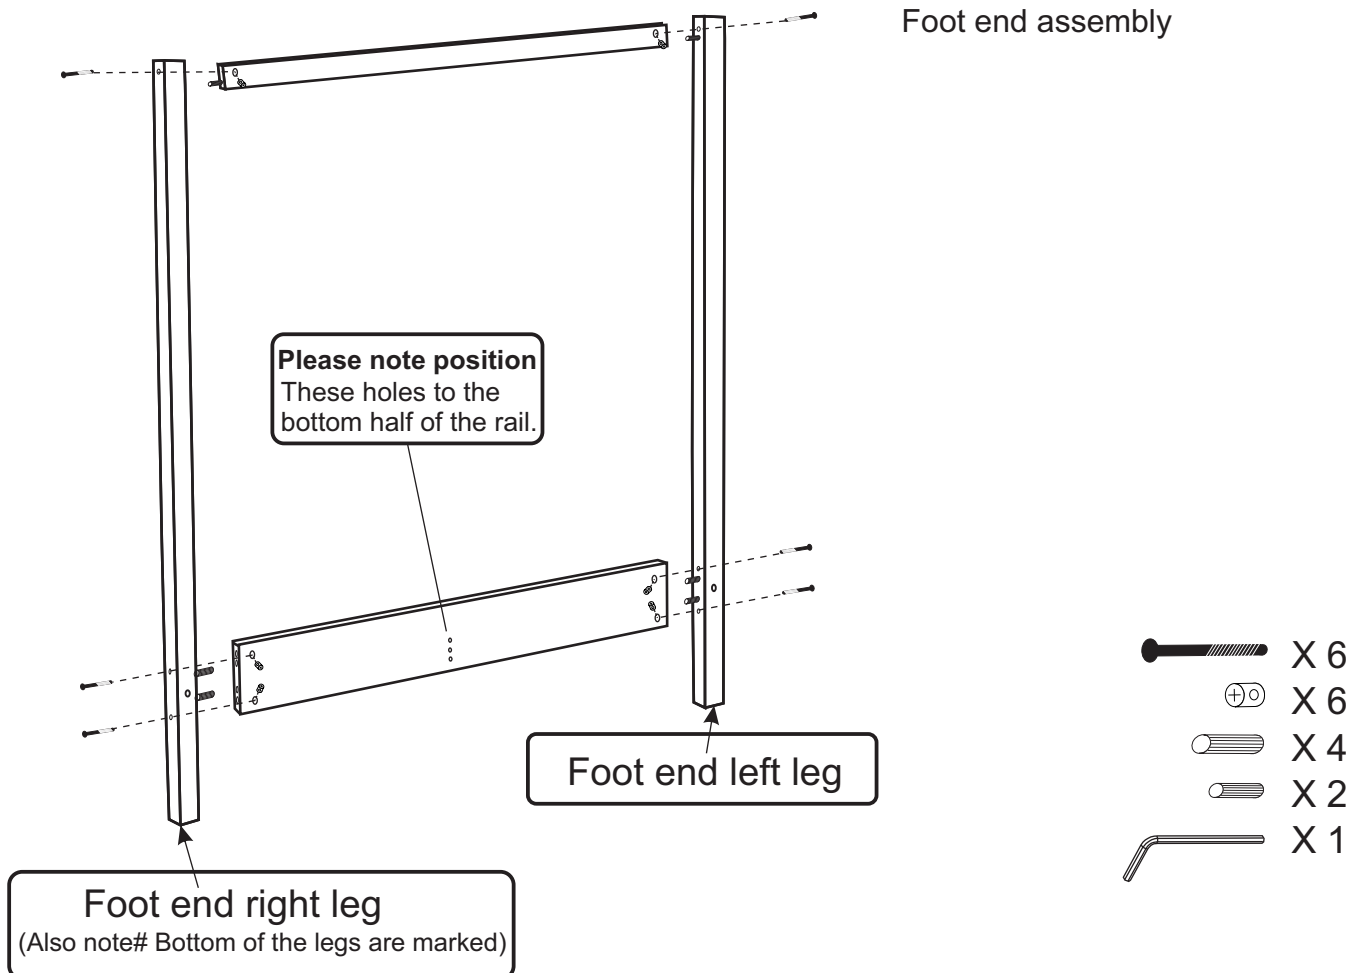

### Step 3

hardware

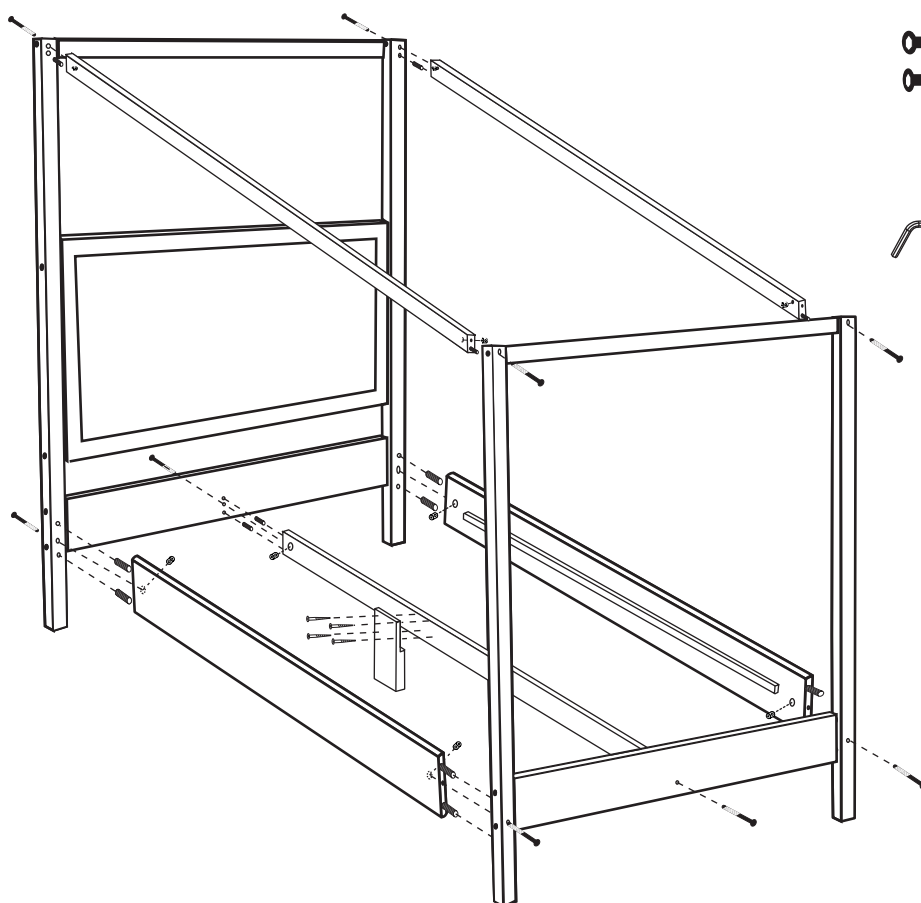


-  X 8 (150MM FURNITURE SCREW)
-  X 2 (80MM FURNITURE SCREW)
-  X 10 (CROSS DOWEL)
-  X 4 (10X40MM DOWEL)
-  X 4 (8X40MM DOWEL)
-  X 1 (5MM ALLEN KEY)
-  X 4 (8X40MM SCREW)

### Step 4


hardware

Inserting Slats

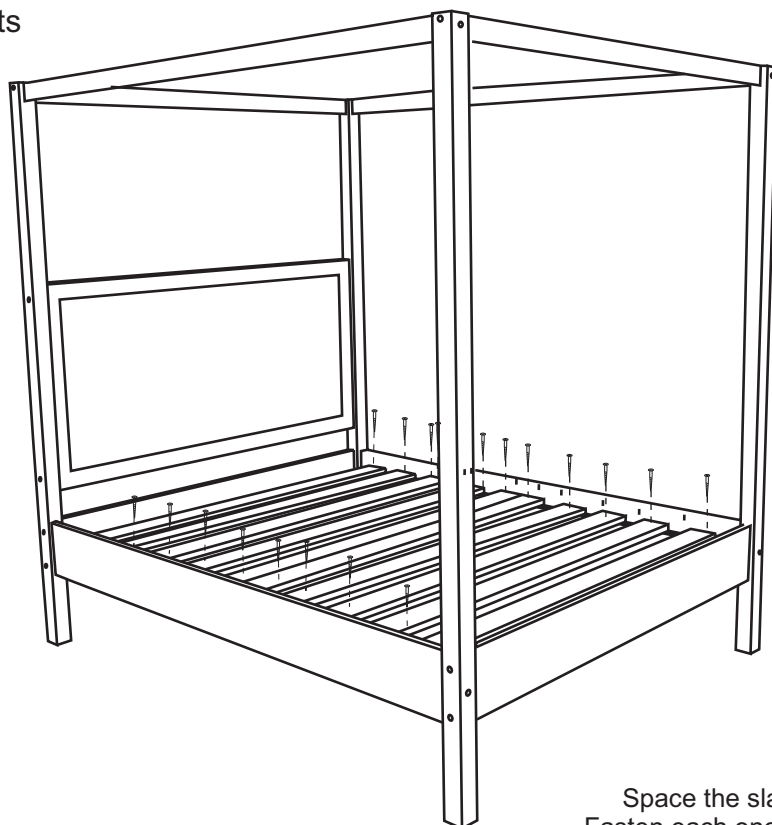

-  X 20 (8X40MM SCREW)

Space the slats evenly on top of the cleats  
Fasten each one with chipboard screws provided

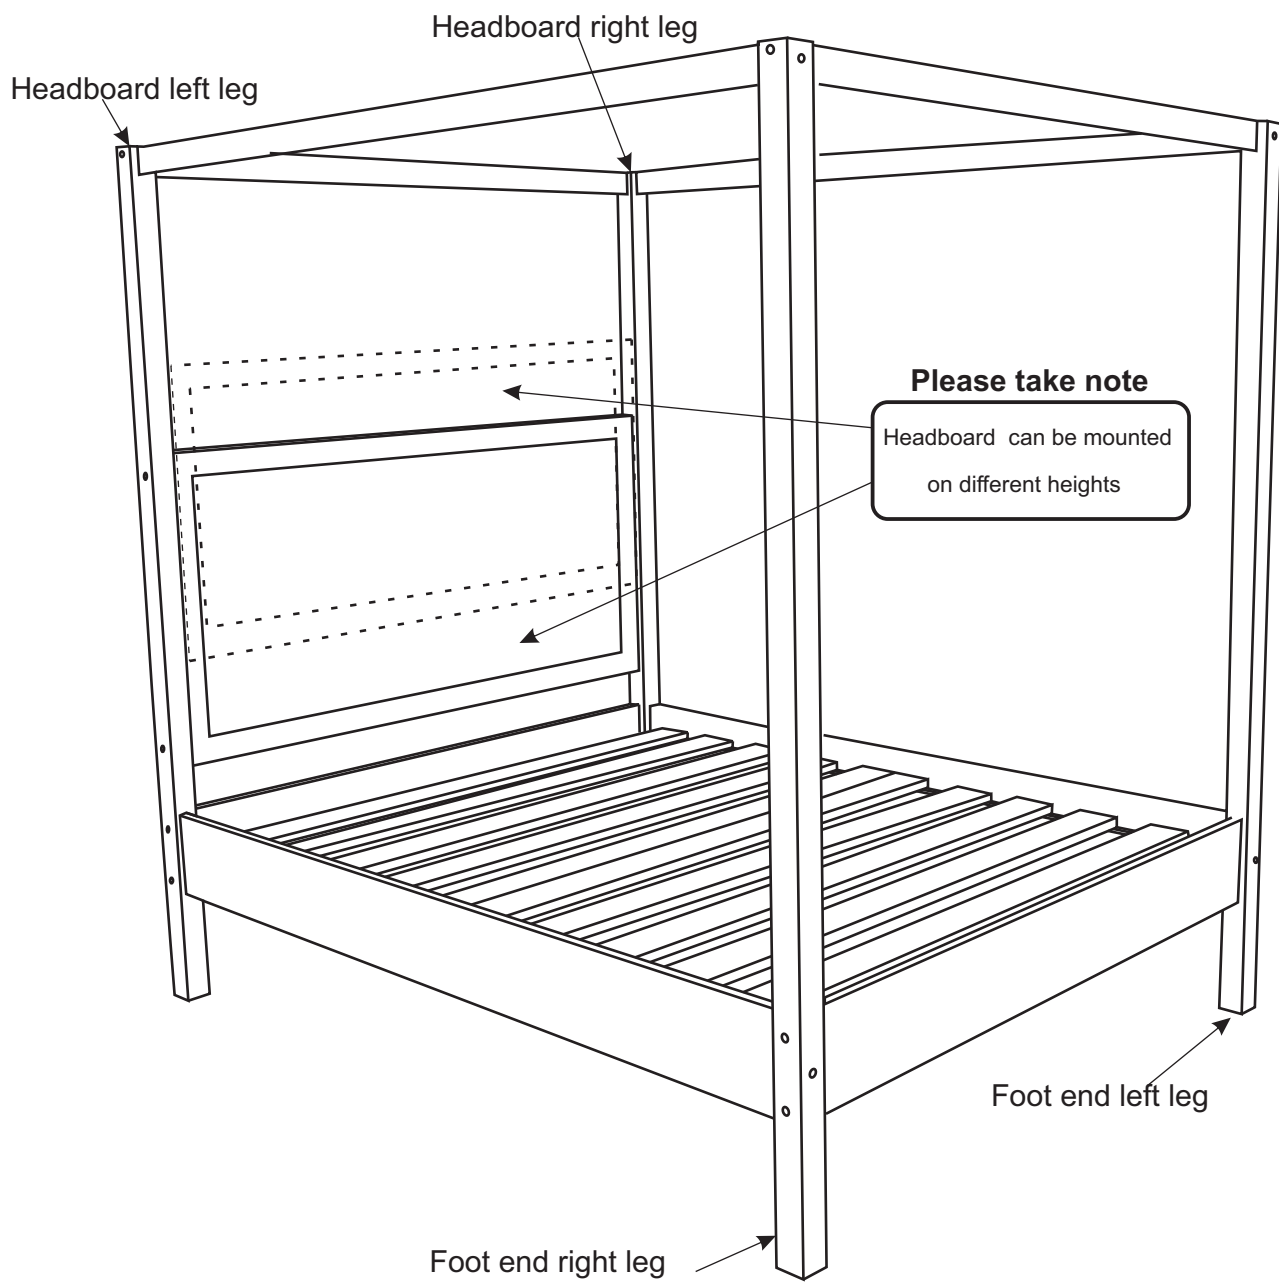

\*Left and right of the foot end is determined by looking from the inside of the bed.(Headboard to your back)\*